



MODEL 871 IMPRINT ADJUSTMENT INSTRUCTIONS

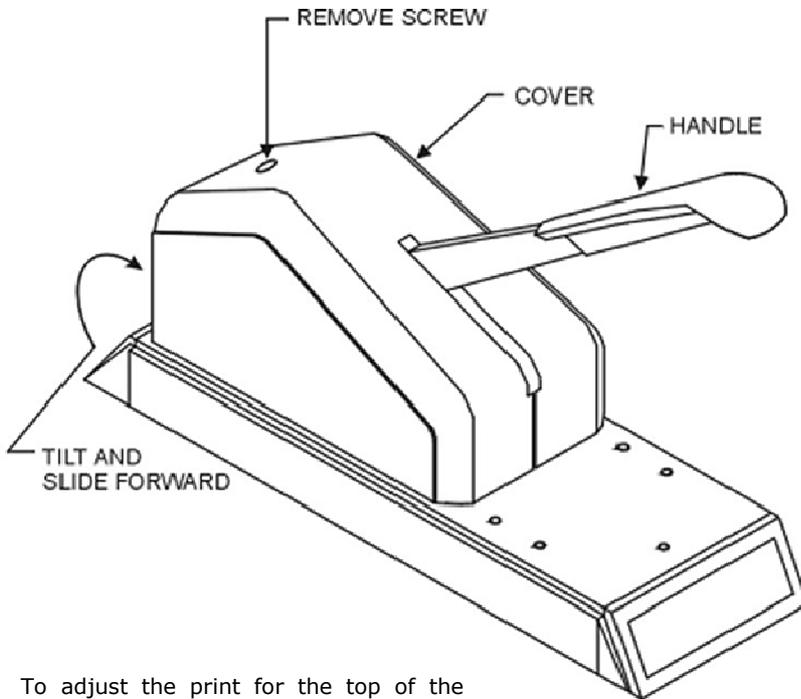

Remove the screw on the top of the cover as shown. Then tilt the back of the cover and tilt it forward. You may have to lift up on the handle to free the cover at the front. After the cover is loose, just slide it forward and let it rest on the handle. Adjust screws in 1/8 turn increments or less and take sample imprints between adjustments. To replace the cover, lift the handle and slide the cover back, allowing it to hook. The cover can tilt back and the screw can be replaced now.


Note: When removing cover, the print mask may come unhooked from the imprinter. See sheet 2 for instructions on replacing the mask.

To adjust the print for the top of the card, adjust this screw. To darken the print, turn screw clockwise. To lighten the print, turn screw counter-clockwise.

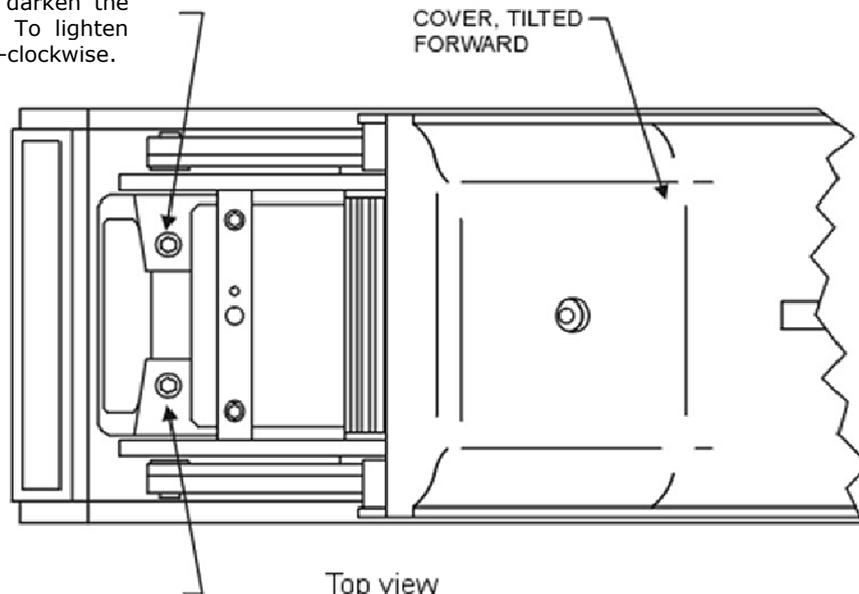

To adjust the print for the bottom of the card, adjust this screw. To darken the print, turn screw clockwise. To lighten the print,

MODEL 871 MASK RE-INSTALLATION INSTRUCTIONS

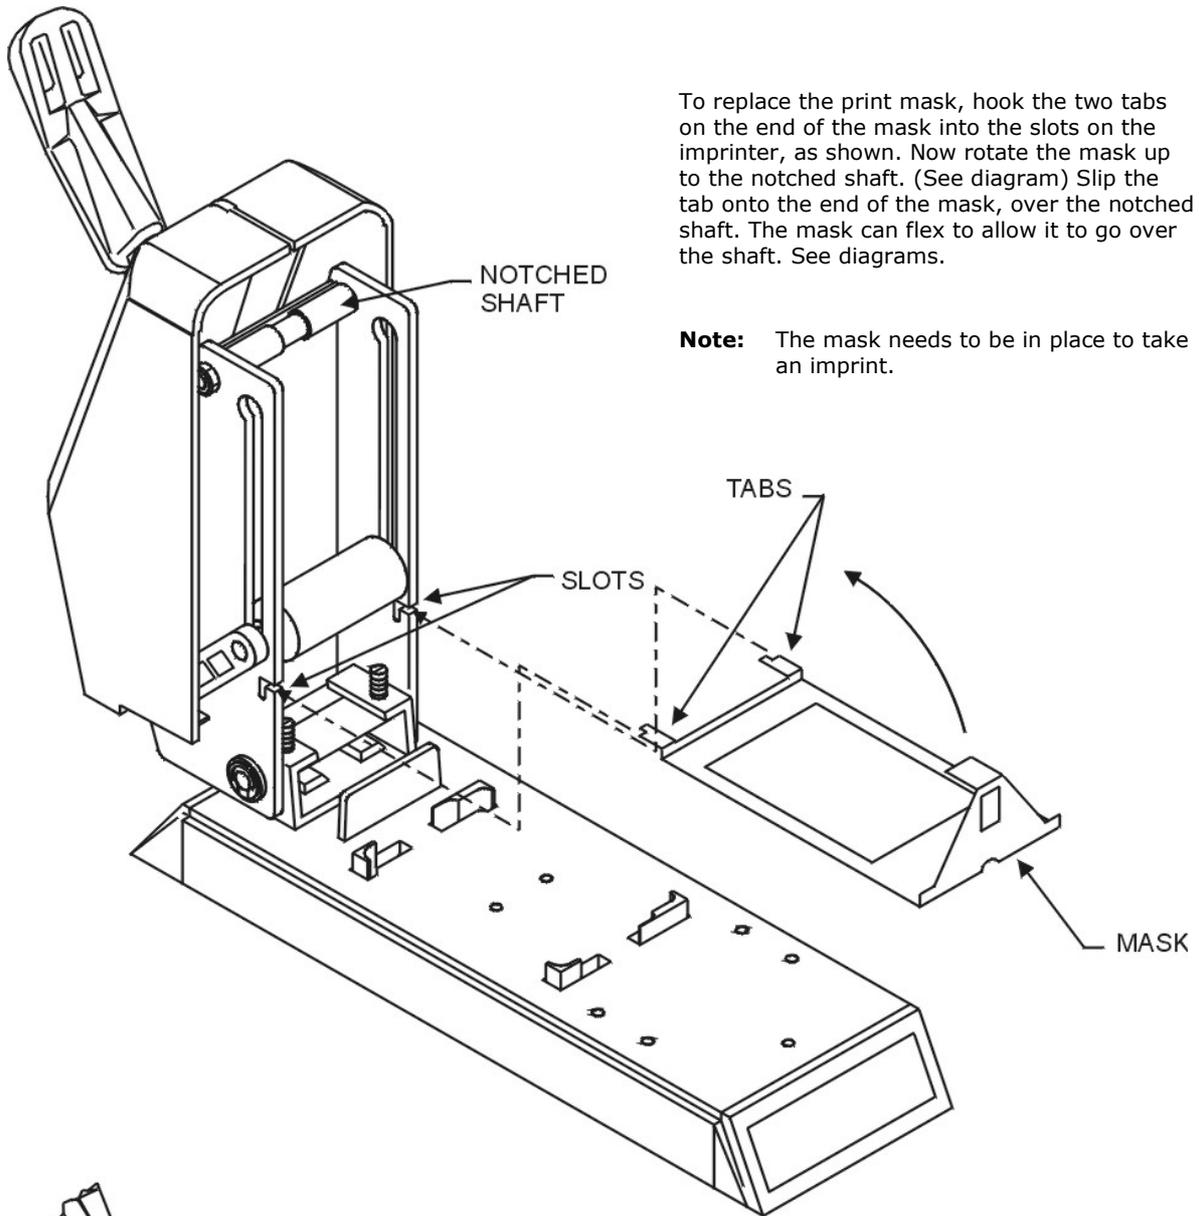

To replace the print mask, hook the two tabs on the end of the mask into the slots on the imprinter, as shown. Now rotate the mask up to the notched shaft. (See diagram) Slip the tab onto the end of the mask, over the notched shaft. The mask can flex to allow it to go over the shaft. See diagrams.

Note: The mask needs to be in place to take an imprint.

