

MODEL 4850 IMPRINTER: OPERATING INSTRUCTIONS

Position the customer's credit card on the imprinter base, as shown in Figure 1. Press down the top of the card ensuring it is held firmly between the card guides.

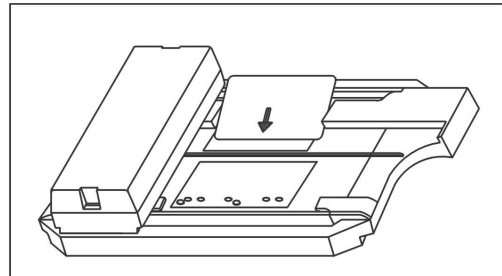


FIGURE 1

Position the sales voucher to be imprinted over the credit card by inserting the voucher from left to right under the voucher holders as shown in Figure 2.

The left side of the sales voucher is positioned under guide (A). Guide (B) holds the right side of a 51 column voucher, and guide (C) holds right side of an 80 column voucher.

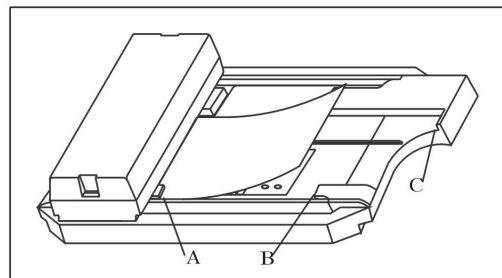


FIGURE 2

Move the imprint handle to the right with a quick, firm motion as shown in Figure 3. This imprints the credit card data. Now return the handle to the start position to imprint the merchant plate data. Remove the imprinted sales voucher and credit card.

N.B. If the imprinter is equipped with the "No Card No Print" feature, the imprinting handle cannot be operated without a credit card being inserted.

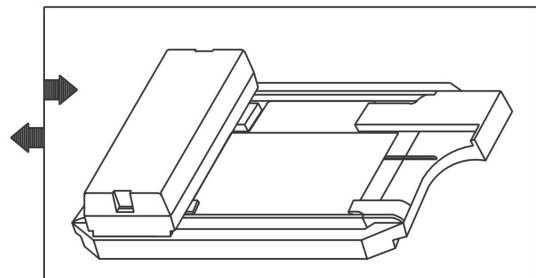


FIGURE 3

MERCHANT/STATION PLATE MOUNTING

Your 4850 imprinter is built to hold various types of merchant/station plates.

Loosen the mounting hardware on the imprinter. Insert the merchant plate under the mounting hardware heads. Tighten the mounting hardware when plate has been positioned properly.

DO NOT remove any shims that may be located under the merchant plate.

