

MODEL 840 – INK ROLLER REPLACEMENT INSTRUCTIONS

To replace the roller, proceed as follows:

1. Unplug the machine from the power outlet.
2. Position the stylus that was supplied with the machine behind the lower white roller. Gently pull the inked roller assembly outward. (Figure 1)
3. Slide the white plastic roller upward, off the metal ink roller shaft. Using the plastic glove to protect your hand, slide the old ink roller off its shaft and discard it.
4. Remove the fresh ink roller from its vial and slide it down onto the shaft. It should move downward until it contacts the lower white plastic roller.
5. Replace the upper white plastic roller on to the ink roller shaft, ensuring that it is positioned with its larger diameter next to the ink roller.
6. Guide the entire inked roller assembly back into place making sure the white stepped roller is positioned in between the metal forks. (Figure 2)

Your machine is now ready for operation. Remove excess ink by running several test imprints before regular operation.

For best results, remember to change your ink roller every 3-6 months.

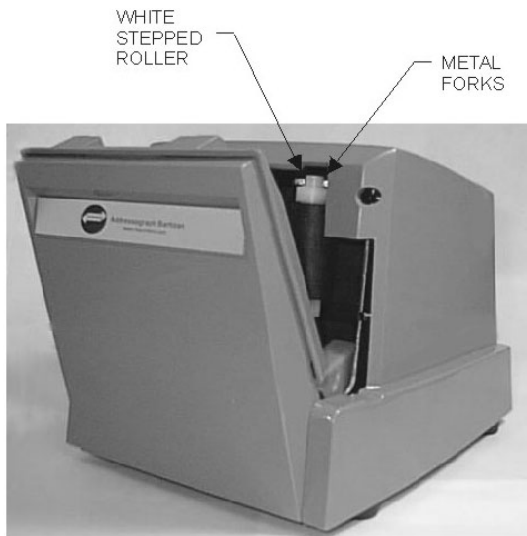


FIGURE 2

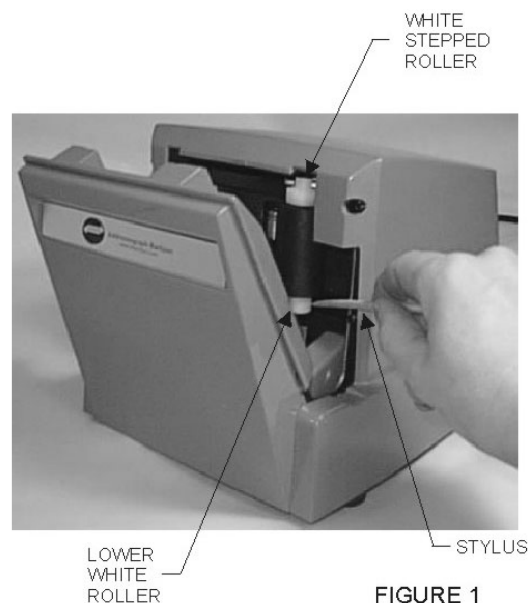


FIGURE 1