

FLATBED IMPRINTERS: PRINT ADJUSTMENT

All units should be tested using the appropriate plastic account card, merchant plate and form set. If any adjustments are required, remove the handle cover of the imprinter and adjust as follows:

Merchant plate print is too light: Turn adjustment screw about ¼ turn clockwise.

Merchant plate print is too dark: Turn adjustment screws ¼ turn anti-clockwise.


Card information is too light: Turn adjustment screws about ¼ turn clockwise.

Card information is too dark: Turn adjustment screws about ¼ turn anti-clockwise

Once the adjustments are made, test the imprint and repeat if necessary.



The location of plate and card adjustment screws for each model are shown below:

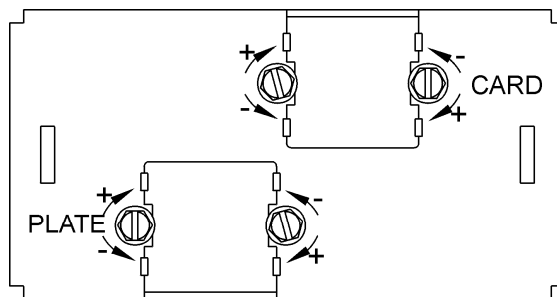MODEL 4850



Model 4850:


Remove the handle cover by pushing the two tabs at either end.

-  TURN SCREWS THIS WAY TO DARKEN IMPRINT
-  TURN SCREWS THIS WAY TO LIGHTEN IMPRINT

MODEL 4000 and 2010/2011

Model 4000 and 2010:

Remove the handle cover by undoing the two screws in the top of the handle.

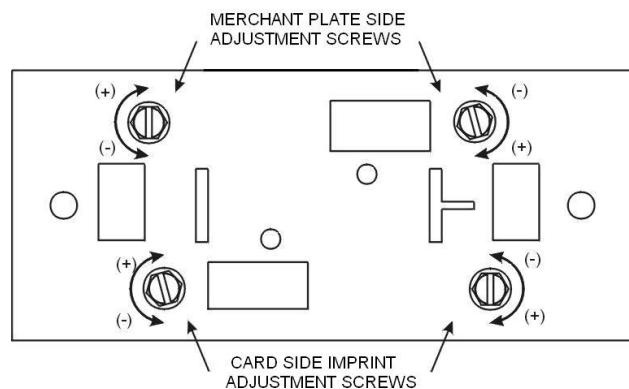

- (+) TO DARKEN IMPRINT
- (-) TO LIGHTEN IMPRINT